

"BLUE LUBE" PIPE GASKET LUBRICANT APPLICATION INSTRUCTIONS

PRODUCT INFORMATION

BLUE LUBE, GASKET LUBE PASTE is a unique product that has been specially formulated to prevent turbidity, taste, and/or odor problems in new water main installations. **BLUE LUBE** will not promote bacterial growth. A blue paste gasket lubricant for lubricating all rubber and plastic gaskets used in mechanical pipe coupling including Gruvlok* and Victaulic** type fittings. Blue Lube insures proper alignment of gaskets for correct fit during pipe installation. It works well on wet or dry surfaces and is suitable for use on potable water systems. Blue Lube is odorless and cleans up easily. Safe for use on all metal and plastic pipe.

CHARACTERISTICS

COLOR: Light Blue

CONSISTENCY: Smooth, grit-free paste. Remains a paste at temperatures above 150°F (66°C). Will not break down if repeatedly frozen and thawed.

TEMPERATURE RANGE USE:
0°F (-17°C) to 150°F (66°C)

FOR USE ON: All plastic and rubber gasketed pipe.

CORROSIVENESS: Non-corrosive.

TOXICITY: Nontoxic; suitable for potable water systems.

FLAMMABILITY: Nonflammable.

Drying time of the paste will vary with weather conditions; therefore, it is important to join the pipe and gasket as soon as possible after applying the lubricant. If drying should occur before joining the pipe with the gasket, re-swab the pipe and gasket immediately. For best results, apply with a cotton swab applicator.

*Anvil International Trademark

** Victaulic Co. of America Trademark

9/2016


©J.C. Whitlam Manufacturing Company




WHITLAM

The Industry Standard for Over 100 Years


DIRECTIONS FOR USE

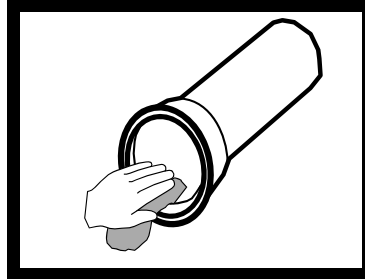


Step 1: Clean bell of pipe. Remove any loose dirt, gravel, rust, scale, or foreign material. Remove standing water for best results.

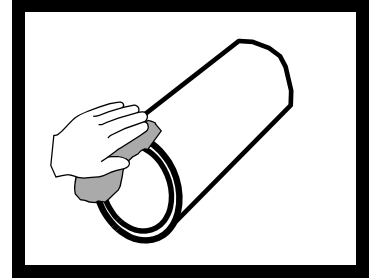


Step 2: Clean spigot of pipe as in Step 1. Surfaces must be thoroughly clean before application of "Blue Lube".

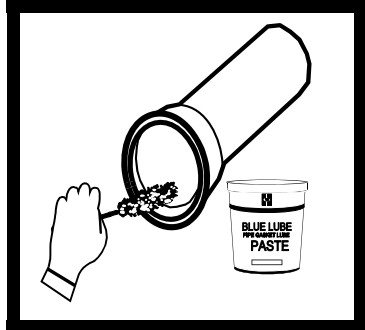

Step 3: Apply "Blue Lube" liberally to the bell of pipe. For best results use a cotton swab applicator.

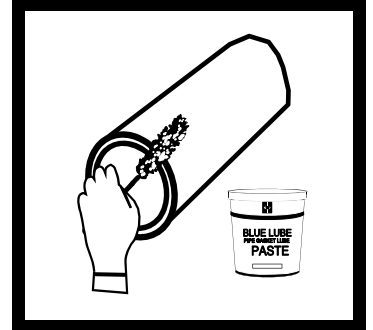


Step 4: Apply "Blue Lube" liberally to the spigot of pipe. Keep the lubricated surfaces free from dirt.

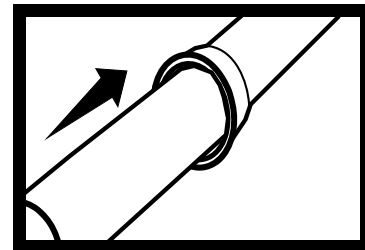

Step 5: Immediately after application of the lubricant, assemble the joint. Apply even pressure and insert the spigot into the bell.



NSF Standard 14
&
NSF Standard 61

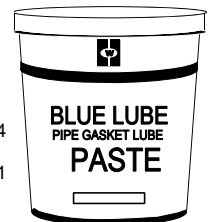

"Blue Lube" is available in
1 pint (473 ml), 1 quart (.95 L),
1 gallon (3.785 L), 5 gallon (18.9 L),
55 gallon (208 L) drums.

U.S. & Canada
Phone: 800-321-8358
FAX: 800-537-0588
www.jcwhitlam.com
sales@jcwhitlam.com